

# Energy and Flexibility Modelling Hands-on 14: Modelling flexibility options in FlexTool

Pease use the following citation for this exercise:

Pooya Hoseinpoori, Alex Kell, & Adam Hawkes. (2021, March). Hands-on 14: Energy and Flexibility Modelling (Version 1.4) <u>https://doi.org/10.5281/zenodo.4617028</u>

Please download the required files from this link: <u>https://doi.org/10.5281/zenodo.4617028</u>

# Learning outcomes

By the end of this exercise, you will be able to:

- 1) Identify the flexibility issues in the case study
- 2) Implement different flexibility options in FlexTool
- 3) Add thermal storage and transmission to FlexTool

4) Compare investments in different flexibility options and assess their impact and costeffectiveness

# Activity 1

We want to identify the flexibility issues in a system with high penetration of variable renewables in the first activity. The case study represents a system with three nodes.

Note: The numbers used in this case study are not representing reality.

Please do the following steps:

1. Download the input file named "Case-study.xlsm" from the link provided above.



- 2. Save the "Case-study.xlsm" in the root folder "InputData\FlexTool-v2.0"
- 3. Open the Flextool main interface (the "flexTool.xlsm" excell file) and add "Casestudy.xlsm" to the *Active input files*.
- 4. Add Base scenario to the Active Scenarios
- 5. Run the model and wait for the result file to open

In the "summery\_D" sheet in the result file, try to identify the flexibility issues by checking the values represented bellow:

Update sheets window	Case-study
	Base
Status	Optimal
VRE share (% of annual demand)	38.17
Loss of load (% of annual demand)	35.54
Excess load (% of annual demand)	0
Insufficient reserves (% of reserve demand)	0
Insufficient inertia (% of inertia demand)	0
Curtailment (% of VRE gen.)	3.964
Loss of load (max MW)	1688.19
Excess load (max MW)	0
Reserve inadequacy (max MW)	0
Insufficient inertia (TWs/a)	0
Curtailment (max MW)	983.581
Curtailment (TWh/a)	0.529473


In the "node\_plot" sheet, check for the load shedding, VRE curtailment, Reserve procured from VRE etc., in different nodes.

#### **Question:**

- Which node has the highest load shedding for heat? What do you think the reason is?
- Which node has the highest load shedding for power?
- Which node has the highest VRE curtailment?
- Which node has the highest outgoing power transfer?

#### Try it:

• From the "units\_elec" sheet, you can find the installed capacity, generation from each technology, the utilization rate of different technologies etc., in the power grid (Check for the plots in the "units\_elec\_plot" sheet).

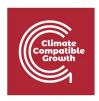

- From the "units\_heat" sheet you can find the installed capacity, generation from each technology, the utilization rate of different technologies etc., for heating (Check for the plots in the "units\_heat\_plot" sheet).
- You can find the information about the power transferred between the nodes in the "transfer\_elc" sheet (Check the plots in the "transfer\_elect\_plot" sheet).

There are a couple of key flexibility issues in the presented system:

- 1. Power load shedding in nodes B & C.
- 2. Heat load shedding in node A
- 3. High VRE curtailment in node A & C

In the following activities, we will take some measures to address these flexibility issues by investing/adding different flexibility options and will investigate how their implementation would affect the results.

# Activity 2

The first step to resolve the flexibility issues is to see if further investment in the new capacities of existing technologies/transmission will resolve the flexibility issues.

- Open the case study input file and in the "unit\_type" and "nodeNode" sheets and review the maximum investment allowed for each technology/transmission line.
- Close the input file and add *Invest* to the active scenarios. Then run the model and wait for the result file to be created (please keep the *Base* scenario in the active scenarios for comparing the results).


#### **Question:**

Did investment in new capacities of existing technologies reduce the loss of load? What about VRE curtailment?

Does the share of VRE increase in the Invest scenario compared to the Base scenario?

Check the results for Invest scenario in "summery\_D" sheet and then go to the "node\_plot" sheet and compare the load shedding and VRE curtailment for *Base* and *Invest* scenarios.



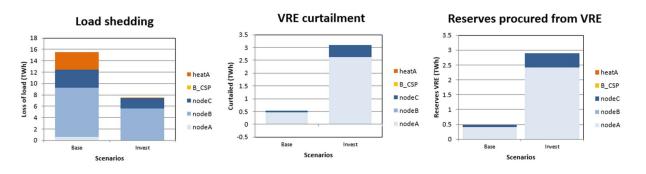

- 1. Investment in new capacities of existing technologies has reduced total system cost.
- 2. Investment in new capacities of existing technologies has reduced the loss of load in Point B.
- 3. Investment in heating generation technologies, in this case heat pumps, has eliminated the loss of heat load in point A.
- 4. Increased investment in renewable generation technologies has increased the VRE curtailment in nodes A and C the invest mode, although there is load shedding in nodes B and C. This can be due to the following:
  - Lack of sufficient flexibility sources (storage, demand response, etc.) in node A
  - Lack of sufficient transmission between the nodes
  - Excess investment in the absence of demand growth

**Try it:** Check the system configuration and technology mix in "units\_elec" and "units\_heat" and "transfer\_elc"

In lecture 13, it was discussed that power to heat, if implemented smartly, can provide flexibility to the power grid. Heat pumps integrated with thermal storage can provide load shifting services to the grid by running at the times that there is excess renewable output in the grid and storing the hot water in the storage tanks.


## Activity 3

In this activity, we want to investigate how adding thermal storage to the system will affect the flexibility issues in the power grid.



To do so, follow the steps discussed in the flexibility option lecture and add a thermal storage unit in the Input file.

- Make a copy of "Case-study.xslm" file in the InputData folder and rename it to "Casestudy-heat.xslm"
- Add a thermal storage unit in "unit" and "unit\_type" sheet in the new "Case-studyheat.xslm". As shown bellow.
- Add the "Case-study-heat.xslm" to the active input file (now you should have both "Case-study.xslm" and "Case-study-heat.xslm") and run the model.

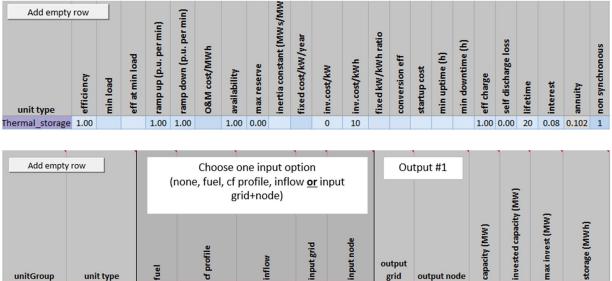

Thermalstorage Thermal\_stor

### **Questions:**

- How does adding thermal storage affect the loss of load and VRE curtailment in different nodes in Base and Invest scenarios?
- How does it affect the total system cost (Optimal objective)?
- Does thermal storage affect the loss of heating load in the Base scenarios?


40000

2500

500



Update sheets window	Case-study	Case-study	Case-study-Heat	Case-study-Heat		
	Base	Invest	Base	Invest		
Status	Optimal	Optimal	Optimal	Optimal		
Optimal objective	1.55E+11	7.41E+10	1,54E+11	7.38E+10		
Curtailment payments (M CUR)	26.47364038	155.1863756	25.26952735	105.3269259		
VRE share (% of annual demand)	38.17	49.21	38.24	48.93		
Loss of load (% of annual demand)	35.54	21.18	35.58	21.18		
Excess load (% of annual demand)	0	0.02157	0	0		
Insufficient reserves (% of reserve demand)	0	0	0	0		
Insufficient inertia (% of inertia demand)	0	0	0	0		
Curtailment (% of VRE gen.)	3.964	18.02	3.776	12.3		
Loss of load (max MW)	1688.19	1390.19	1688.19	1390.19		
Excess load (max MW)	0	-153.169	0	0		
Curtailment (max MW)	983.581	2237.13	896.495	1822.24		
Curtailment (TWh/a)	0.529473	3.10373	0.505391	2.10654		
Model leakage (TWh/a)	-0.00913161	-0.0480479	-0.00913161	-0.0280732		
Capacity inadequacy (max MW)	0	0	0	0		
Spill (TWh/a)	0	0.325747	0	0		

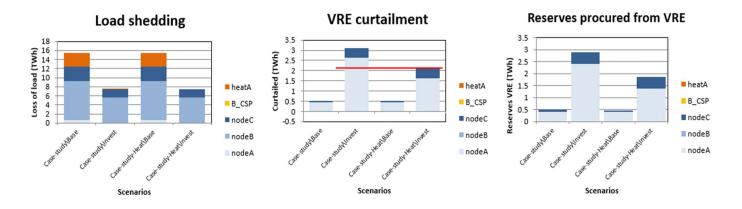

### Try it:

- Check the system configuration and technology mix in "units\_elec" and "units\_heat" and "transfer\_elc".
- Check the utilisation rate of thermal storage in both Invest and Base scenarios.
- 1. Adding thermal storage provides load shifting over time in node A which reduces the VRE curtailment and accordingly reserve requirements in point A and therefore the curtailment payments in the system.
- 2. Adding thermal storage does not impact in power load shedding in points B & C (It is very minor).
- 3. Adding thermal storage does not reduce the heat load shedding in the base case because the loss of heat load, in that case, is due to insufficient heat pump capacity.



Although adding the thermal storage and enabling power to heat flexibility option effectively reduces the VRE curtailment by load shifting over time, but it does not solve all flexibility issues in all the nodes. In the next activity, we try load balancing over space between nodes and add more transmission capacity.

# Activity 4


We investigate impacts of investing in additional transmission in two steps:


**Step 1:** In the first step, we want to investigate if additional investment in expanding the existing transmission will solve the flexibility issues. To do so:

- Make a copy of "Case-study-heat.xslm" file in the InputData folder and rename it to "Case-study-heat-trans.xslm".
- From the "nodeNode" sheet increase the maximum investment in existing transmission to 1000 MW.
- Add the "Case-study-heat-trans.xslm" to the active input data list and run the model.
- (you can remove Base from active scenarios if you want to reduce the number of scenarios generated. That make the comparison between different scenarios easier.)


### **Questions:**

Does increased investment in existing transmission capacity solve all flexibility issues in all the nodes?

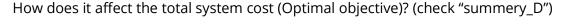

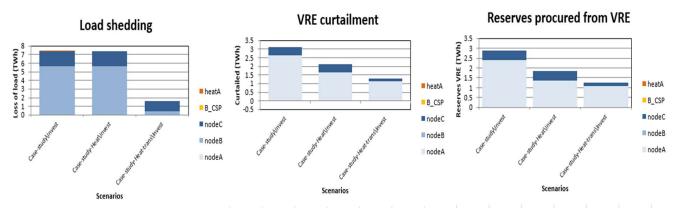



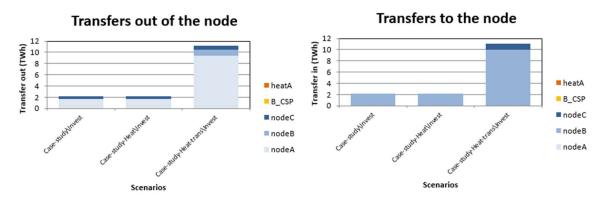

In the "node\_plot" sheet, check how additional investment in transmission will affect the Load shedding, VRE curtailment and power balancing between the nodes. In addition, check the power transferred between the nodes and the utilisation rate of transmission lines.

Increased investment in transition between node A and B and node B and C, reduces the loss of load in node B and also reduces the renewable curtailment in point A. However, it only partially reduces the loss of load in point C.

### Step 2:

In this step, we want to add a new transmission line between points A and C: since we still have high VRE curtailment in node A and a small amount of loss of load in Point C we want to add a new transmission link between point A and C.

Add a transmission line between points A and C in "nodeNode" sheet with zero Capacity and 1000 MW max investment and rerun the model.


grid	empty roo	w	cap.rightward (MW)	cap.leftward (MW)	invested capacity (MW)	max invest (MW)	loss	inv.cost/kW	lifetime	interest	annuity	HVDC	color in results
elec	nodeA	nodeB	150	150		1000	0.01	100		0.08	0.082	0	
elec	nodeB	nodeC	100	100		1000	0.01	100		0.08	0.082	0	
elec	nodeA	nodeC	0	0		1000	0.01	100	50	0.08	0.082	0	



### **Questions:**

Does increased investment in existing transmission capacity solve all flexibility issues in all the nodes?

How the power transferred through other transmission lines? (check "transfer\_elc")

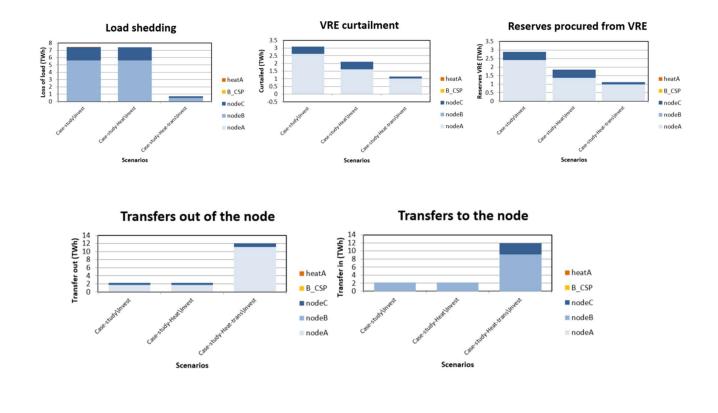

- Investing in additional capacity between nodes A and C seems to reduce the loss of load in node C effectively. However, it doesn't have a major impact on VRE curtailment in node A compared to step 1.
- 2. The additional line will reduce the power transferred from node B to C (rightward) significantly. Both transmission lines BC and AC have low capacity factors that indicate the level of investment exceeds what is required and could be reduced.



### Try it :

Try adding other flexibility options such as demand-side management and increasing investment in storage units in node A and check if these options will further reduce the VRE curtailment in Node A.

Note: To add demand repose in point A or B, you can just copy the existing Demand response units and change the output grid to the desired node, and change installed capacity and Max Investment. You can also increase the investment in demand-side management in point C.

Note: If none of the options works, this means there is an excess investment in VRE units that exceeds demand. To deal with this issue, you can either reduce investment in renewables or try to make additional demand by adding EV network or Hydrogen network to the system.

Please check the input file template EV and check "nodeGroup", "gridNode", "unit\_type", "unitGroup", "units" and "ts\_energy" sheets to learn how to add an EV network to the system in a specific node.

Add empt	ty row	(n	ione, fuel, c	e one input op f profile, inflo grid+node)		put	Ou	tput #1		acity (MW)			storage (MWh)	2			ratio	ne series	u	u	ration e	
unitGroup	unit type	fuel	d profile	inflow	input grid	input node	output grid	output node	capacity (MW)	invested capacity	max invest (MW)	storage (MWh)	invested storage	max invest (MWh)	storage start	storage finish	reserve increase	use efficiency tir	fix unit generatio	min genei	use max generat use min online	m MO
Hydro	Hydro_RES			nodeA_RES			elec	nodeA	300		200	300000		0								1
Hydro	Hydro_ROR			nodeA_ROR			elec	nodeA	150		0											1
Battery	battery						elec	nodeA	100		50	200										
Dem_inc	demand_incr						elec	nodeC	-30		100											
Dem_dec	demand_decr						elec	nodeC	40		100											
Dem_inc	demand_incr						elec	nodeA	-30		100											
Dem_dec	demand_decr						elec	nodeA	40		100											